

neo FRESNEL 2

USER MANUAL




Ljusdesign

Contents

Mounting on track	3
Operational features	4
Settings	5
Barn doors attachment	6
Lighting design	7

Mounting on track

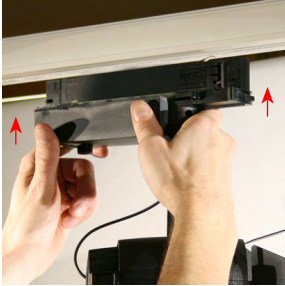

Put the luminaire in the track.



Lock the side lock.



Lock the adapter lock by pushing until it clicks.

Operational features

Pan and tilt lock makes it possible to target and lock the device in a fixed position. The luminare can be rotated 365 degrees and be locked with the pan lock.



Tilt locking

1. Loosen the tilt knob.
2. Tilt the fixture.
3. Tighten the tilt knob.



Pan lock

1. Loosen the pan lock knob.
2. Rotate the fixture.
3. Tighten the pan lock knob.



Tilt angle

The tilting is limited from 0 to 93 degrees, further tilting can result in the lock being damaged.

Settings



Phase selector

Set up the phase [3 . 1 . 2]
The dots symbolizes "off"




Dimmer

Adjust the brightness with
the potentiometer.

Barn doors attachment




Press together the barn doors with your hand and push it into the front of the luminaire.

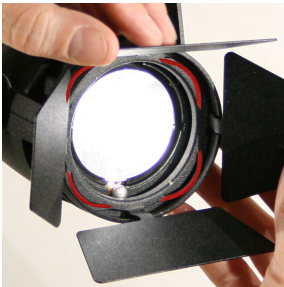

Make sure all four latches are in place. If necessary, use a small flat blade screwdriver and push them in place.

(If you ever need to remove the barn doors, gently bend up the latches.)

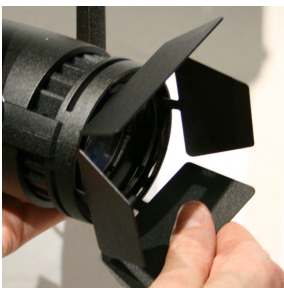

The barn doors is now attached and can be rotated.

Lighting design



Beam angle

Adjust beam angle with the focus knob by turning it.



Sharpness/Colour

You can adjust edge sharpness and/or colour temperature by applying filter.



Control

Use barn doors to control the light even further.

Questions?



Keep in touch!

Ljusdesign

Södra Skeppsbron 4, 802 80, Gävle, Sweden
www.ljusdesign.se * info@ljusdesign.se * +46 (0)26 66 15 00